

Ecotrac[®]

Definitions of Features & Commands

- **Locate** - When you activate this feature, the map view will update with the current location of your vehicle. The map will display the address and speed of your vehicle, if applicable.
- **Satellite View**- When viewing a map, you have the option of selecting the satellite view. This is an actual satellite image of the location of your vehicle or asset.
- **Zoom/Pan**- When viewing a map, you have the option to pan or zoom in and out, depending on the view you desire.
- **Geo-Fence Alert**- This command allows you to set a radius perimeter “fence” around your vehicle or asset. Each time your vehicle enters or exits the “fenced” area, a notification will be sent to you. A Geo-fence is set for the current location of the vehicle at the time the command is sent.
- **Movement Alert**- When the Movement Alert feature is activated, you will be notified if your vehicle or asset moves for any reason. (Vehicle must move more than 100 yard in any direction)
- **Speed Alert**- When set, you will receive a notification if the vehicle is driven faster than the speed limit you have entered for more than 5 seconds. Once the vehicle drops below the set speed for more than 5 seconds a second notification is sent to determine duration.
- **Vehicle Alarm Monitor***- When installed, this feature will notify you if your vehicle’s alarm is triggered while the ignition is off.
- **Low-Battery Monitor**- You will be notified if the charge of the battery source for the system has reached a level that is too low to function properly.
- **Door Unlock***- This command can be activated online or by phone. If you happen to lock yourself out of your vehicle, you don’t need to wait for a locksmith or roadside assistance.
- **Starter Disable***- This feature allows you to disable the vehicle so it will not start. If activated while the vehicle is being driven, this feature will not engage until the vehicle stops and the ignition has been turned off. If the vehicle is driven into an area with no cellular coverage, the feature will not engage until cellular coverage is reestablished.
- **Notifications**- If an event occurs that triggers an alert or alarm, you will receive an automated message (via telephone, text message and/or e-mail,) depending on how your profile is setup in the “Notifications” page.

* Proper wiring connection to the vehicle system is required to make this feature operational.